

# M30-THRU T47-I.B. 85.5mm ROAD

#### SAFETY INFORMATION - READ BEFORE RIDE

Since specific tools and experience are necessary for proper installation, it is recommended that the product be installed by a qualified bicycle technician.

Read the service instructions of your crank carefully prior to installing the parts. Loose, worn or damaged parts may cause riding problems and serious injury may occur as a result. If installation and adjustments are not carried out correctly, the chain may come off and this may cause you to fall off the bicycle which could result in serious injury. **Read these instructions carefully, and keep them for later use.** 

- · Ensure that the BB shell is clean
- Apply Anti-Seize to the drive cup threads and smooth taper area before installing.
- Before riding the bicycle, check that there is no play or looseness in the bottom bracket connection. Also, be sure to retighten the crankarms and pedals at periodic intervals.
- If you feel any looseness or 'play' in the bearings, the bottom bracket should be inspected/replaced.
- Be sure to read the instructions for your front chainrings/crank in conjunction with these service instructions.
- Do not wash the bottom bracket with high-pressure jets of water.
- For maximum performance it is required to remove and periodically inspect/clean your Praxis Works bottom bracket.
- Parts are not guaranteed against natural wear and tear resulting from normal use.
- For any questions regarding methods of installation, adjustment, maintenance or operation, please contact a professional bicycle dealer or call Praxis Works.
- · Praxis Works assumes no responsibility for damages or injury related to improperly installed components.

#### READ THE STEP-BY-STEP INSTRUCTIONS THAT ARE PROVIDED ON THE OTHER SIDE.

For the latest instructions and knowledge base updates: https://praxiscycles.com/tech-docs/

#### WARRANTY

- Praxis Works Bottom Bracket products are warrantied to be free from defects in materials or workmanship for two
  years after original purchase. The warranty is non-transferable and valid to the original purchaser of the product only.
- Any attempt to modify the product in any way such as drilling, grinding or painting will void the warranty.
- This warranty is not valid for "abused" or neglected products, or products that are damaged by improper installation.
- If a defect is found, our entire liability and your sole remedy shall be, at our option, free repair or replacement of the Praxis product.
- Except as expressly required by law, Praxis Works shall not be held liable for any indirect, special, or consequential damages.

THIS WRITTEN EXPRESS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, IMPLIED OR EXPRESSED. This warranty gives you specific legal rights, and you may also have other rights which vary state to state. For more information on warranty policy and instructions for completing a warranty claim, check out the Full Warranty Policy found at our website. www.praxis-works.com

M30 THRU T47 Internal Bearing (I.B.) BB Compatibility and Spec				
CRANKSET	Compatible with Praxis M30 THRU & other-brand cranks			
FRAME SHELL	T47 I.B. 85.5mm width Road Frames			
FRONT DERAILLEUR	Braze-on, Clamp-on or Direct Mount			

### **REQUIRED TOOLS**

One Praxis M30 BB Tool

· Anti-Seize Compound

3/8" Drive Torque Wrench

Waterproof Grease

Included Parts Below					
Number	Part	Qty			
1	30mm ID 2mm Dust Cover	1			
2	Non-Drive/Left Cup 30mm ID Bearing	1			
3	Sleeve (internal dust/moisture sleeve)	1			
4	Drive/Right Cup 30mm ID Bearing	1			
5	30mm ID 2mm Dust Cover	1			
6	30mm ID 3mm Dust Cover	1			

### FOR PARTS IDENTIFICATION USE ONLY




LEFT/NON-DRIVE 30mm I.D.

RIGHT/DRIVE 30mm I.D.


# TOOLS REQUIRED



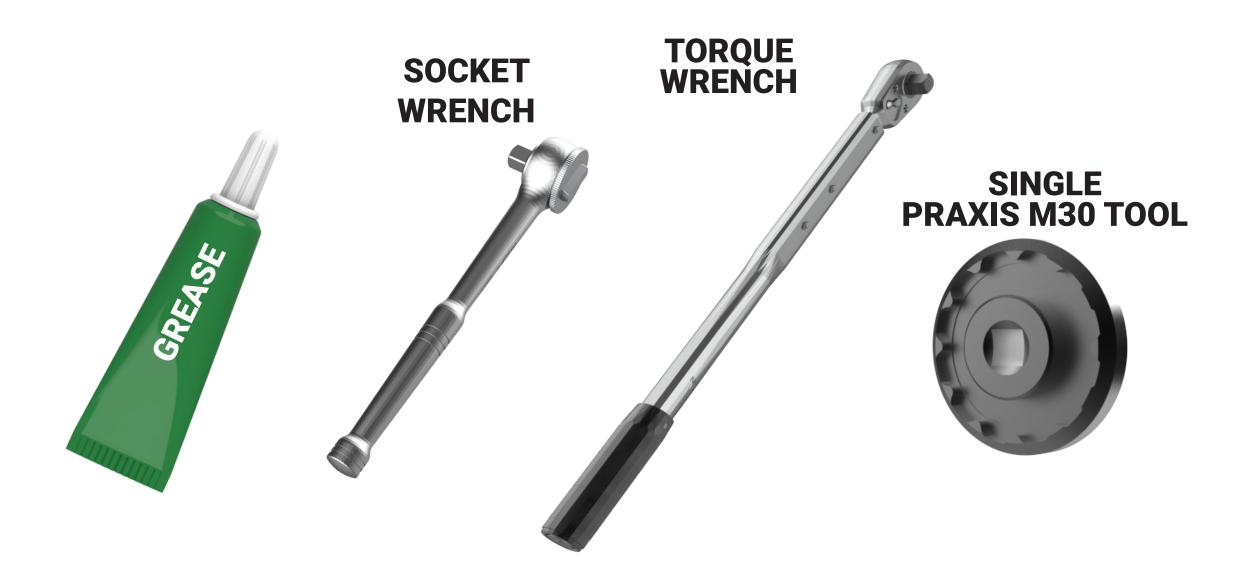


### **BOTTOM BRACKET INSTALLATION**



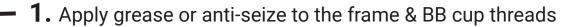

- 2. Locate, read and follow the directional arrows on the cups
- **3.** Thread the Right/Drive cup into the frame's Right/Drive side
- **4.** Thread the Left/Non-Drive cup with the attached moisture seal into the frame's Left/Non-Drive side
- **5.** Finish by tightening both cups to 40Nm of torque with a *Praxis M30 Tool*
- **6.** See next page to find correct Dust Covers for your crank. Lightly grease underside of Dust Covers and place them over bearings with Praxis logos facing outward. Now you can install the crank

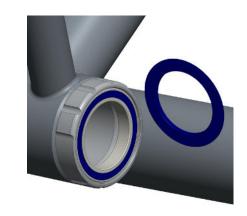



Please see CRANK instructions at www.praxiscycles.com/manuals

## **BB DUST COVER SETUP**

30mm

Only 1 cover per side!

T47 I.B.

LEFT/NON-DRIVE 30mm I.D.



RIGHT/DRIVE 30mm I.D.

### **CRANK SPINDLE MEASUREMENT CHECK!**

103mm or longer for Road 108mm or longer for MTN"

### **REFERENCE - FRAME BB SPECS**

85.5MM WIDTH - ROAD

89.5MM WIDTH - MTN

T47 I.B.

(INTERNAL BEARING)

M47x1.0 THREADING

## **BB DUST COVER GUIDE**

ROAD M30-THRU	WIDTH	CRANK	LEFT 30MM COVER	LEFT CUP SPACER	RIGHT CUP SPACER	RIGHT 30MM COVER
DCA	68	DOON	Preload Ring <b>Only</b>	-	-	3mm
BSA		OTHER BRAND	2mm	-	-	2mm
T47 E.B.	68	DOON	Preload Ring <b>Only</b>	-	-	3mm
		OTHER BRAND	2mm	-	-	2mm
. T47.LD	85.5	DOON	Preload Ring <b>Only</b>	-	-	3mm
<b>★ T47 I.B.</b>		OTHER BRAND	2mm	-	-	2mm
T47 Asym	76.75	DOON	Preload Ring <b>Only</b>	-	-	3mm
		OTHER BRAND	2mm	-	-	2mm
DD06	06.5	DOON	Preload Ring <b>Only</b>	-	-	3mm
BB86	86.5	OTHER BRAND	2mm	-	-	2mm
206510 06	06.5	DOON	Preload Ring <b>Only</b>	-	-	3mm
386EVO	86.5	OTHER BRAND	2mm	-	-	2mm
<b>BB30/PF30</b> 68	60	DOON	Preload Ring <b>Only</b>	-	-	3mm
	00	OTHER BRAND	2mm	-	-	2mm
DDDiah+	79	DOON	Preload Ring <b>Only</b>	-	-	3mm
BBRight		OTHER BRAND	2mm	-	-	2mm

MTN M30-THRU	WIDTH	CRANK	LEFT 30MM COVER	LEFT CUP SPACER	RIGHT CUP SPACER	RIGHT 30MM COVER
	68	GEN1 LYFT	Preload Ring <b>Only</b>	2.5	2.5	2mm
		GEN2 LYFT	Preload Ring <b>Only</b>	2.5	2.5	6mm
DCA		OTHER BRAND	2mm	2.5	2.5	2mm
BSA	73	GEN1 LYFT	Preload Ring <b>Only</b>	-	-	2mm
		GEN2 LYFT	Preload Ring <b>Only</b>	-	-	6mm
		OTHER BRAND	2mm			2mm
		GEN1 LYFT	Preload Ring <b>Only</b>	-	-	2mm
T47 E.B.	73	GEN2 LYFT	Preload Ring <b>Only</b>			6mm
		OTHR BRAND	2mm	-		2mm
		GEN1 LYFT	Preload Ring <b>Only</b>	-	-	2mm
* T47 I.B.	89.5	GEN2 LYFT	Preload Ring <b>Only</b>			6mm
		OTHER BRAND	2mm	-	-	2mm
		GEN1 LYFT	2mm	-	-	2mm
BB90	89.5	GEN2 LYFT	1mm	-	-	6mm
		OTHER BRAND	2mm			2mm
		GEN1 LYFT	Preload Ring <b>Only</b>	-	-	1mm
BB92	92	GEN2 LYFT	1mm	-		4mm
		OTHER BRAND	2mm			2mm
	73	GEN1 LYFT	Preload Ring <b>Only</b>	-	-	2mm
BB30/PF30		GEN2 LYFT	Preload Ring <b>Only</b>	-	-	6mm
		OTHER BRAND	2mm	-	-	2mm

### **CRANK SPINDLE MEASUREMENT CHECK!**

103mm or longer for Road 108mm or longer for MTN"