


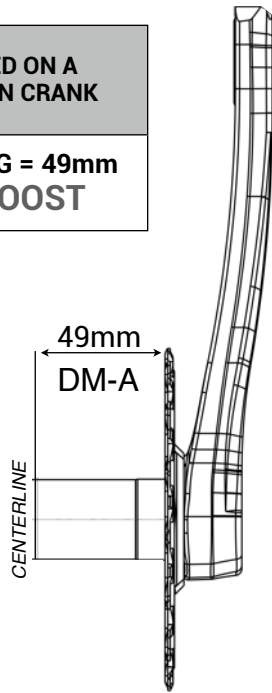


INSTALLED ON A PRAXIS MTN CRANK

"DM-A" RING = 49mm  
NON-BOOST





INSTALLED ON A PRAXIS MTN CRANK

"DM-B" RING = 52mm  
BOOST

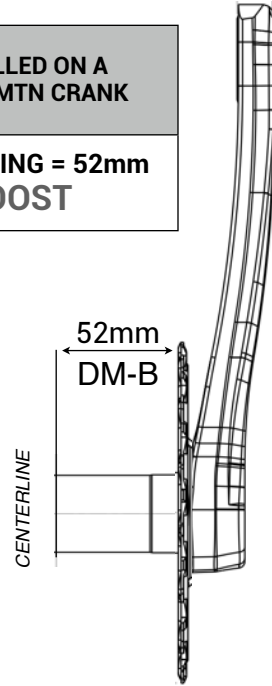

INSTALLED ON A PRAXIS MTN CRANK

"DM-C" RING = 55mm  
SUPER BOOST

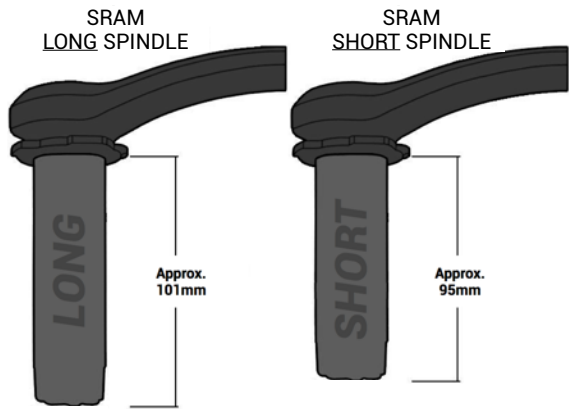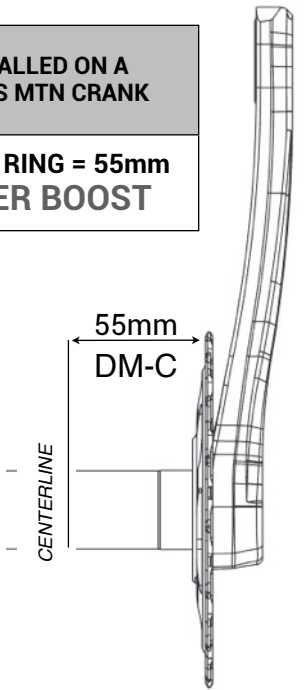


SRAM - REFERENCE PHOTO

Check your crank spindle as SRAM has different length versions

INSTALLED ON A SRAM "LONG" SPINDLE MTN CRANK


"DM-A" RING = 52mm *BOOST*

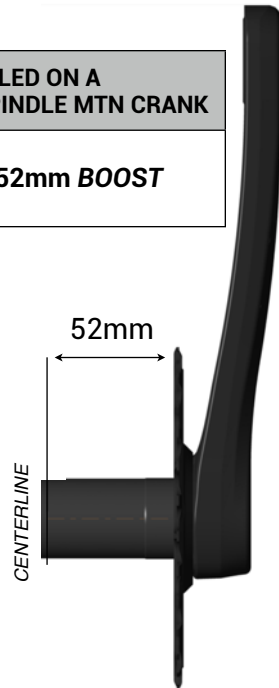

INSTALLED ON A SRAM "SHORT" SPINDLE MTN CRANK

"DM-B" RING = 49mm *"NON-BOOST"*

*Note - Do NOT install DM-A ring on short spindle SRAM cranks.*

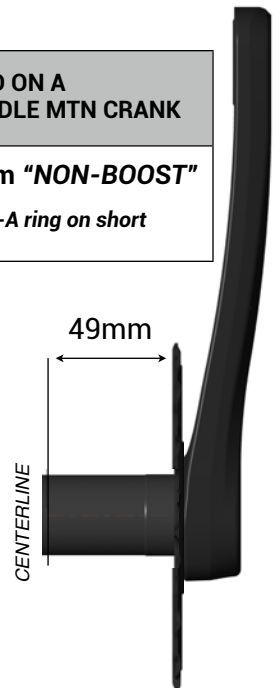


# PRAXIS WAVE TECH RING / CHAIN SET UP

# TECHNICAL GUIDE

## ROAD & MTN

**CHAIN INSTALLATION :** Make sure your chain is aligned and placed correctly on the Wave Tech ring or chain will not sit down and ride on teeth correctly. Please see graphic below.

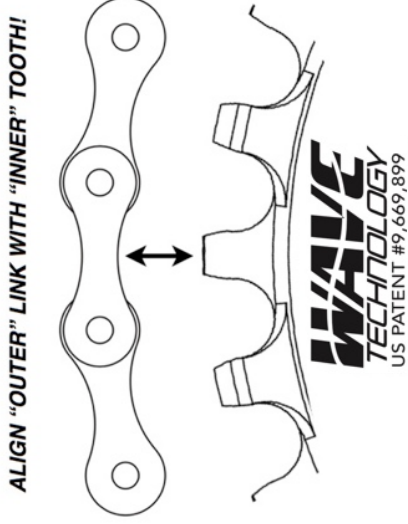

## ROAD & MTN



**DM INSTALLATION :** If installing a DM ring, tighten the Torx bolts to **8nm**.