

**IMPORTANT :** *You are required to use proper bearing installation/removal tools to pull/press these bearings into a Praxis bottom bracket. Failing to use correct tools can and will damage your new bearings and/or your BB and void your warranty.*

We highly suggest using Enduro's bearing removal/press tool kits or similar shop level bearing tool kit. Do NOT attempt to replace bearings without the correct bearing tools.


***If you do not have the correct tools, please take your bike to your local bike shop for bearing replacement!***

## M30 BB MODELS FOR REBUILD

*M30-BSA | M30-BB30/PF30 | M30-BBRight*

*M30-T47 EB | M30-T47 IB | M30-386EVO\**

*\*Model does not have c-clip*

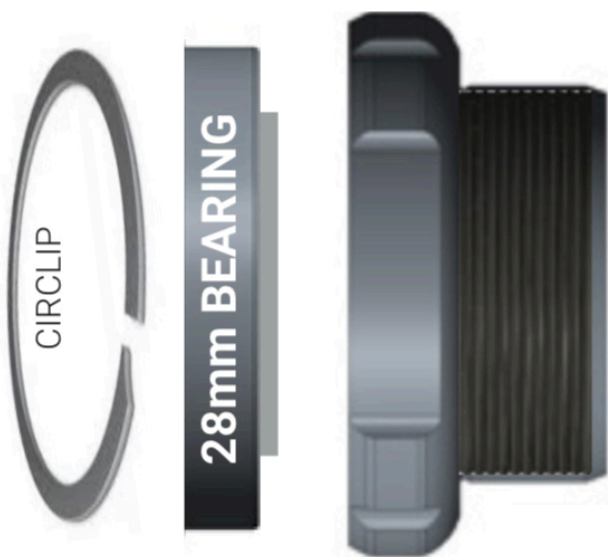

**LEFT/NON-DRIVE**

**28mm**

*(Note: reducer faces down!)*



**RIGHT/DRIVE**

**30mm**

# REFERENCE PHOTOS / NOTES

**28MM SIDE -** Gently pop clip out if your model BB has one. Then you can pull bearing (Reinstall after new 28mm bearing is pressed back in)



**PULLING BEARINGS -** Reference of a bearing puller to correctly pull out worn bearings.



**30mm PRESS -** 30mm use drift to press.



**28mm PRESS -** Flip the 30mm drift over and use it to press the 28MM down



Simply flip the drift over like this to press the 28mm bearing